




Accessory Installation Instructions

Snowmobile Trailers


Installation Instructions

SNOWMOBILE TRAILERS

Salt Shield

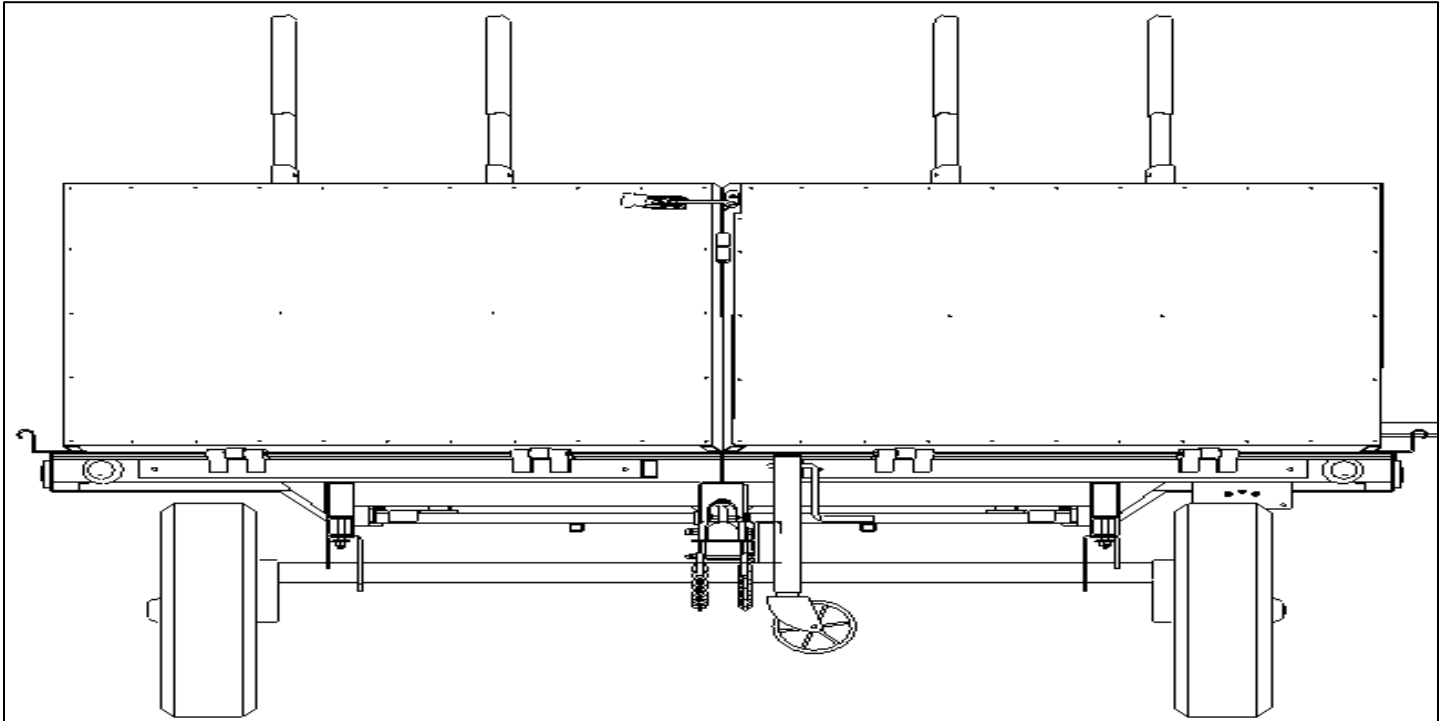

1. Mounting brackets
 - a. Grab salt shield brackets and clamp them 5 1/8" over from center of the "V" in the front of the trailer as shown in Figure A.

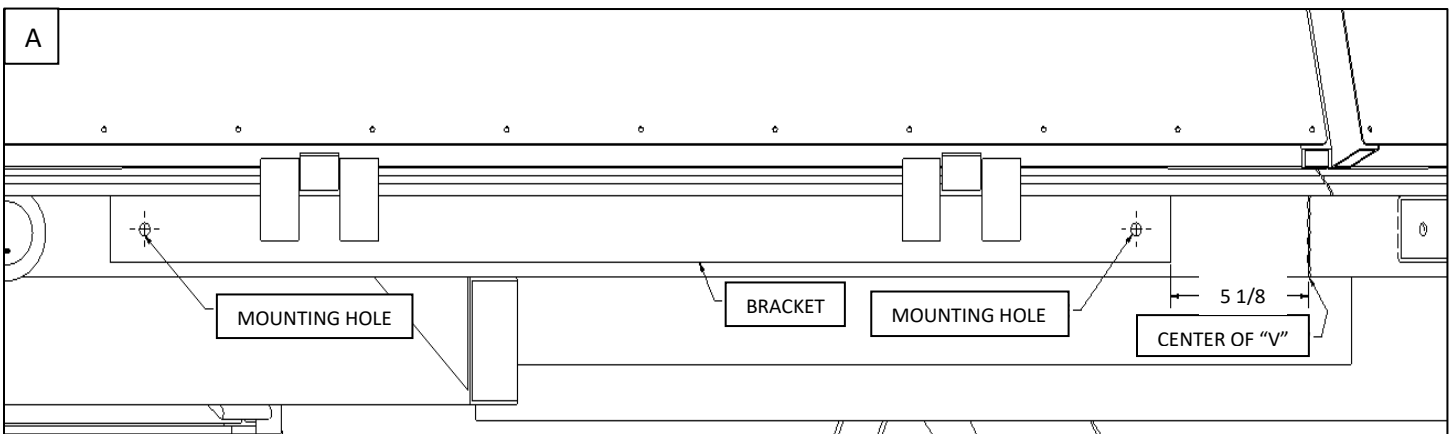

2. Drilling holes
 - a. Drill the two 13/32" holes using the bracket as a template.
 - b. Bolt the brackets to the trailer using the 3/8" bolts with washers on each end.
3. Once the brackets are bolted to the trailer, install the salt shields onto the brackets using the 1/2" bolts.